

ANSONICS a division of
Taos Techsonics, Inc. *Rugged leak detectors since 1963*
(575)758-4555 www.ansonics.com

HANDLING, STORAGE, AND REPAIR OF YOUR SON-TECTOR

HANDLING AND STORAGE

The Son-Tector is rugged. One was dropped from a 30-foot tower onto pavement and continued to operate! Nevertheless, while hard knocks may not cause failure, they should be avoided as much as possible. Common sense and the following suggestions will insure trouble-free operation:

1. Protect the blue plastic hand probe (microphone) from moisture and other contamination. Water, in small amounts, will not cause permanent damage. Corrosive or coating material will destroy the unit's sensitivity.
2. The unit is not waterproof and should be protected from the elements.
3. We recommend the use of the carrying case for storage and transportation. The case gives effective protection from rough handling and considerable protection from the weather when the unit is used outdoors.
4. If the unit is to be stored for more than several months, the battery should be removed. The battery, if allowed to corrode while in storage, may do considerable damage. At any time, be sure the instrument is turned off before placing it in storage, even overnight.

BATTERY REPLACEMENT for the Son-Tector

The Son-Tector uses a standard 9 volt alkaline or mercury battery obtainable at most stores. The battery is located under the leather flap at the bottom of the amplifier package. (Discontinued models 100 and 130 - in the handle - remove three screws). When replacing the battery or battery cover, be careful not to strain or pinch the wires.

BATTERY REPLACEMENT for the Son-Caster

Current Son-Casters come factory equipped with a 9 volt zinc-carbon battery. A zinc-carbon battery brings any possible explosion hazard which may exist in a gas atmosphere to a minimum. Alkaline or mercury batteries may be used for all other applications.

PERFORMANCE TESTING OF THE SON-TECTOR

Enclosed with your Son-Tector you will find a small plastic squeeze bottle. The bottle is a handy way to check for proper operation. A brisk squeeze should be clearly audible to the tool at a distance in excess of 50 feet. In the event the sound cannot be heard or the meter does not move, the battery should be replaced.

PERFORMANCE TESTING OF THE SON-CASTER

To test the Son-Caster, turn it on and hold it close to your ear. If the unit is operating properly you will be able to hear a faint buzzing sound. If you cannot hear the buzzing sound, replace the battery.

IF REPAIR IS REQUIRED

If trouble develops, first try a new battery before returning the unit for repair. Do not attempt to open the rest of the unit. If the battery is good and the unit does not work, return it to us. We will put it back in working order and return it to you.

1. ***Send to the factory:***

**Ansonics a division of Taos Techsonics
1307 Paseo Del Pueblo Norte
El Prado, NM 87529**

2. **Include a brief description of the problem, your telephone number, and your return address.**

3. Our lifetime warranty for units sold after 9/1/03 is as follows: If you have not squished the unit flat, if you have not melted it in a furnace, or abused it in some other way, AND the battery is not the problem, send us the unit. We will fix it and send it back at no cost to you. We cover defects in material or workmanship as well as normal wear and tear. If we believe your repair is outside the normal wear and tear category, is not a defect, or has been caused by abuse, we will call you and make sure you want to authorize the reasonable repair charge.

4. Please feel free to call, write, email, or send us a fax if you have questions:

P.O. Box 250, El Prado, NM 87529, USA
sales@ansonics.com
Phone and fax (575)758-4555

Ansonics Warranty Registration

This card must be filled out and returned to our factory within 10days of purchase to put the lifetime warranty into effect.

Model: **SON-TECTOR 110-M**

Serial # **22504**

purchased from	your company name
address	address
city, state, zip	city, state, zip
date of purchase	signature

Place in a stamped envelope to:

Ansonics a Division of
Taos Techsonics, Inc.

P.O. Box 250

El Prado, NM 87529

U.S.A



SERVICE SATISFACTION DELIVERED

Being part of the RaySafe Service Program means that you have invested in keeping your instrument looking good and performing like new.

At RaySafe we serve thousands of customers all over the world, every day, not only with high quality instruments but also with top-notch service.


It is important that you return your RaySafe instrument to an authorized service center annually, with a 12 month cycle starting from the original purchase date. The best way of keeping your instrument in perfect condition.

Unfors RaySafe offers comprehensive solutions for the X-ray room to measure the performance of X-ray equipment, to monitor medical staff dose in real-time and to manage X-ray radiation for the benefit of the patient. RaySafe helps you avoid unnecessary radiation.


Contact details for service issues:

International:	customerservice.se@raysafe.com
North and South America:	customerservice.us@raysafe.com
Asia Pacific:	customerservice.apac@raysafe.com
Europe Middle East Africa:	customerservice.de@raysafe.com


www.raysafe.com

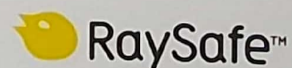

Service Record

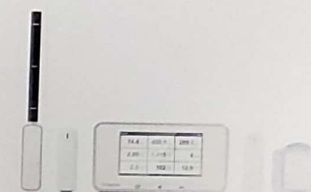

© 2014.03 Unfors RaySafe 5600240-1.0





ACCURACY REQUIRES A CALIBRATED INSTRUMENT

We recommend annual calibration of your X-ray quality assurance instrument. As most international and national regulations stipulate annual checks of the X-ray equipment, it is of utmost importance that also your X-ray meter is calibrated annually. Regular checks increase credibility of your X-ray equipment and offers increased radiation protection for medical patients and staff. The calibration is performed by RaySafe trained service staff and technical experts. Once it is completed, you will receive a NIST/PTB traceable certificate.

RAYSAFE SERVICE PROGRAM - YOUR PREFERRED OPTION

RaySafe Service Program is the best way to keep your RaySafe instrument looking and performing like new. The annual service within the RaySafe Service Program includes calibration with adjustments, product enhancements and extended warranty to a fixed cost. Please return your instrument for service no later than 12 months after the last calibration date to your closest RaySafe Service Center.

RETURN PROCEDURE

Every unit sent in for service must be accompanied by a completed service request form. You find it at www.raysafe.com.

ACCREDITED SERVICE CENTERS

RaySafe is dedicated to continuously improve and maintain a high level of quality in the field of calibration. RaySafe Service Centers in the US and Europe are both ISO/IEC 17025:2005 accredited according to the General Requirements for the Competence of Testing and Calibration Laboratories.

OUR WARRANTY

Your RaySafe instrument will be free from defects in material and workmanship under normal use and service.

The warranty period is 12 months from the date of purchase. Any repair or replace of a defect product is free of charge during the warranty period. Instruments enrolled in the Service Program are covered by extended warranty. After each annual calibration and service within the Service Program, RaySafe provides an extended 12 months functional warranty. It is extendable for up to 5 years from instrument purchase date. If the failure was caused by misuse, alteration, accident or abnormal condition of operation or handling however, the repair cost will be billed to you. The RaySafe warranty is exclusive and is in lieu of all other warranties. Cancellation of the Service Program is accepted in written only. Prepaid service will not be credited in case of cancellation.

Six Steps to Service Satisfaction:

Service Requested

Complete a service request form during inspection

Incoming inspection

We perform a visual and electrical inspection. We also provide arrival calibration data to ensure traceability.

Product enhancements

Software update with improved functional features, replacement of cables, chargers, case as needed.

Calibrated and adjusted

Only we can calibrate and adjust our instruments. Calibration certificates are NIST/PTB traceable.

Quality controlled

The instrument and cables, final quality control before leaving sent back. A calibration label is delivered with the instrument.

Satisfaction delivered

You will receive your instrument, performing and looking like new, with another year of extended warranty.

ANSONICS a division of
Taos Techsonics, Inc. *Rugged leak detectors since 1963*
(575)758-4555 www.ansonics.com

SON-TECTOR OPERATION INSTRUCTIONS

The Son-Tector is simple to use. No calibration or maintenance is required.
Follow these easy steps:

INSTRUCTIONS FOR PRESSURIZED LEAKS

1. Attach the coil cord to the hand probe (blue plastic cylinder).
2. Attach the other end of the coil cord to the unit.
3. Turn on the unit.
4. Turn up the volume until you can just hear the background noise (hiss).
Increasing the volume does not increase the leak detection sensitivity. Setting the volume control too high can create operator fatigue.
5. Ask someone to simulate a leak by squeezing the enclosed plastic bottle. Move the blue hand probe in a sweeping motion in the direction of the simulated leak. You will hear the sound escaping from the bottle and see the meter move. You are ready to find leaks.
6. Move the blue hand probe in a sweeping motion in the direction of the suspected leak. You will hear the leak. Follow the sound. It is as easy as that.

Additional items you may need:

- a. **Headphones** are for noisy environments.
- b. The rubber **sound concentrator** finds the exact point of the leak. Once the general area of the leak has been located with the blue hand probe, slip the rubber sound concentrator over the screen end of the probe to zero in on the precise leak location.

In the 112 and 123 packages, the rubber sound concentrator is normally stored over the metal rod of the contact probe.

side 1 of 2

INSTRUCTIONS FOR NON-PRESSURIZED LEAKS

1. Follow steps 1 through 5 on page 1 (over).
2. Turn on the small blue metal Son-Caster box and place it on one side of the barrier with the screen opening facing the suspected leak. The Son-Caster fills the leaking area with ultra sonic sound. On the other side, use the Son-Tector with the blue plastic cylindrical hand probe to hear the sound coming through the leak.

INSTRUCTIONS FOR MECHANICAL MALFUNCTIONS bad bearings, valves, steam traps, etc.

1. Attach the long, narrow, metal contact probe to the coil cord.
2. Attach the other end of the coil cord to the unit.
3. Turn on the unit.
4. Turn up the volume until you can just hear the background noise (hiss). Increasing the volume does not increase the leak detection sensitivity. Setting the volume control too high can create operator fatigue. You may find it convenient to touch the probe tip to the noise source before advancing the volume control. Often, mechanical noise pick-up is quite intense and setting the volume too high may be deafening.
5. Touch the tip of the metal contact probe to a mechanical noise source such as a wrist watch, fan motor, or a piece of metal being tapped with another piece of metal. You will hear the sound through the unit. Each mechanical malfunction has it's own distinct sound. In the field, you will easily be able to differentiate a malfunction from proper function. You are ready to find malfunctions.
6. Touch the tip of the metal contact probe to the area being tested. Correct operation sounds one way, malfunction sounds another way. You can easily hear the difference.

You may need **headphones** if you are working in a noisy environment.

ANSONICS
P.O. 250, El Prado, NM 87529, USA
www.ansonics.com
email sales@ansonics.com
Phone and fax (575)758-4555

Ansonics Warranty Registration

This card must be filled out and returned to our factory within 10days of purchase to put the lifetime warranty into effect.

Model: **SON-TECTOR 110-M**

Serial # **22505**

purchased from	your company name
address	address
city, state, zip	city, state, zip
date of purchase	signature

Place in a stamped envelope to:

Ansonics a Division of
Taos Techsonics, Inc.

P.O. Box 250

El Prado, NM 87529

U.S.A